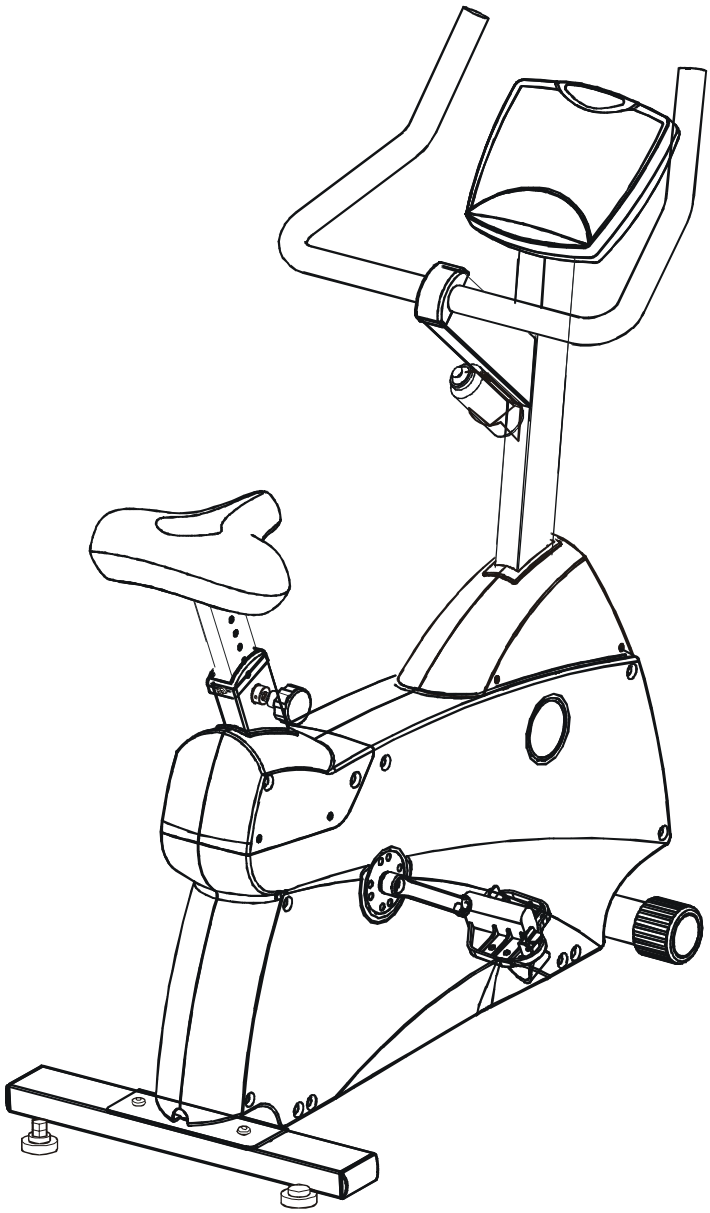

Example of a starting Serial Number UT4060210000001			
UT4	06	0210	000001
Model #	Plant #	Year/month	Starting Serial Number
Operation Manual REX2289			
Service Manual M051-00K25-A059			

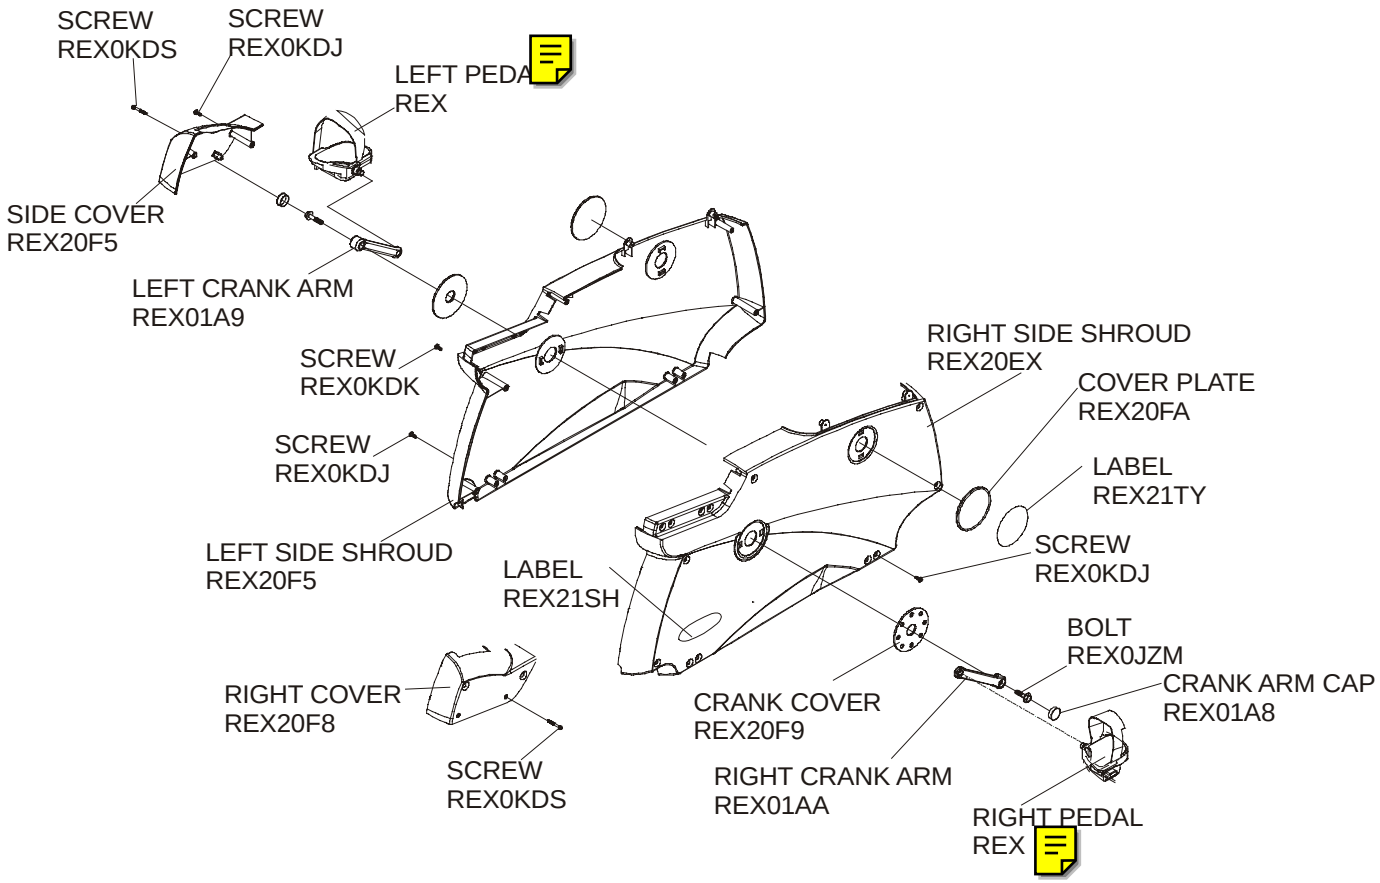
SCREW
REX0KDS
SCREW
REX0KDJ
LEFT PEDAL
REX
SIDE COVER
REX20F5
LEFT CRANK ARM
REX01A9
SCREW
REX0KDK
SCREW
REX0KDJ
LEFT SIDE SHROUD
REX20F5
RIGHT SIDE SHROUD
REX20EX
COVER PLATE
REX20FA
LABEL
REX21TY
SCREW
REX0KDJ
LABEL
REX21SH
BOLT
REX0JZM
CRANK ARM CAP
REX01A8
RIGHT COVER
REX20F8
SCREW
REX0KDS
CRANK COVER
REX20F9
RIGHT CRANK ARM
REX01AA
RIGHT PEDAL
REX

CONSOLE ASEMBLY (ENG/ENG)
REX22D8

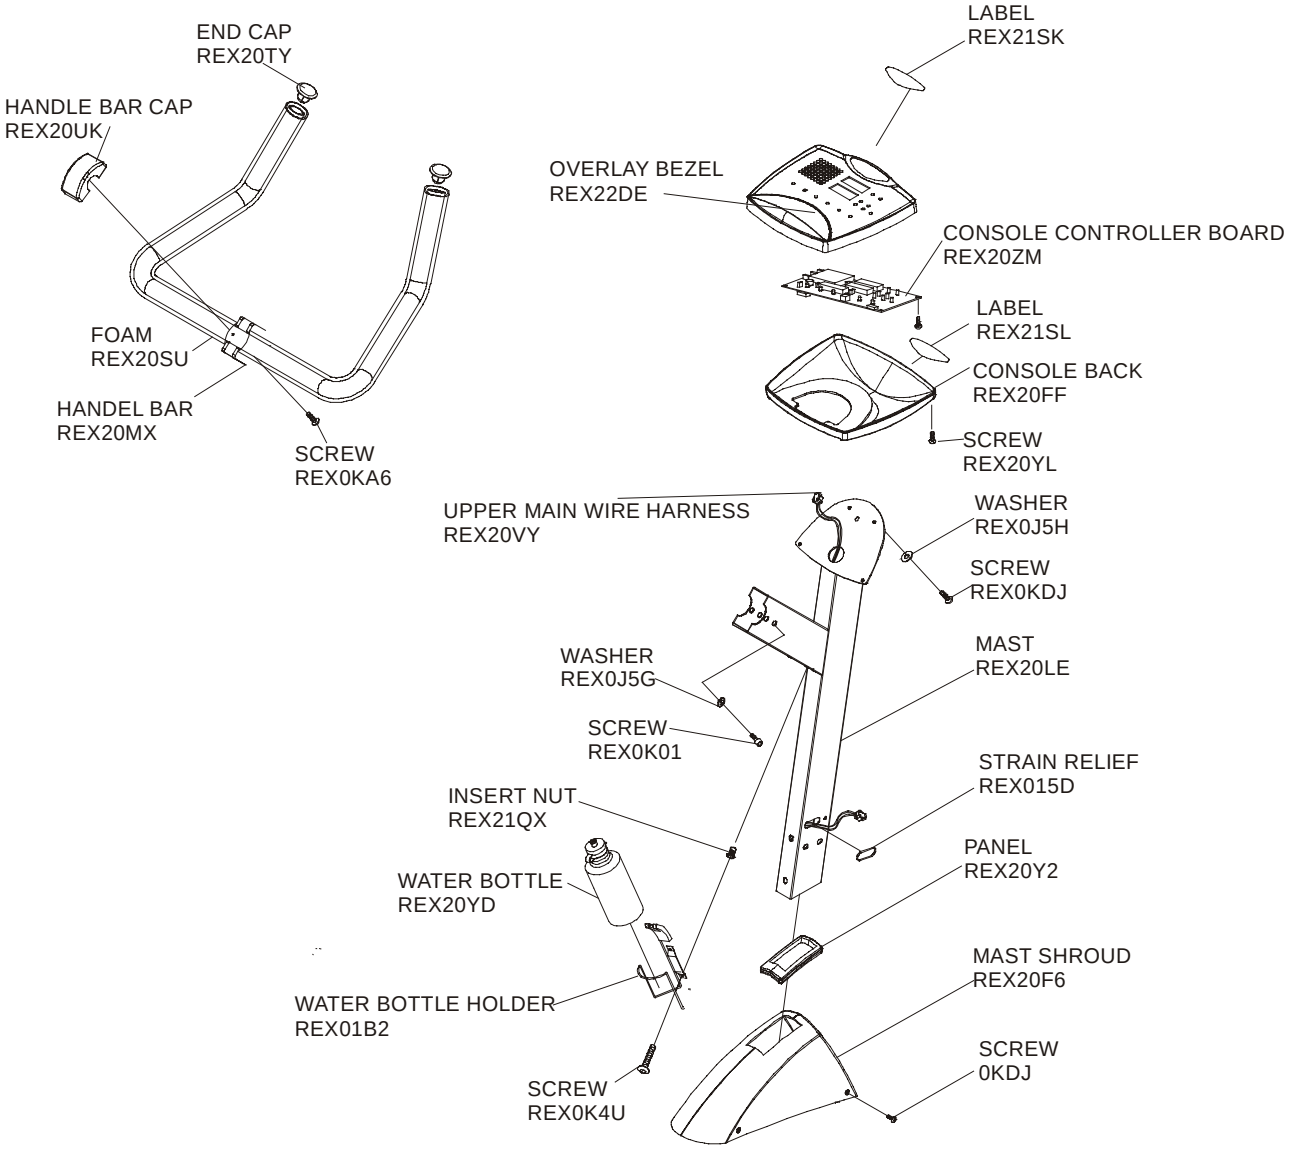

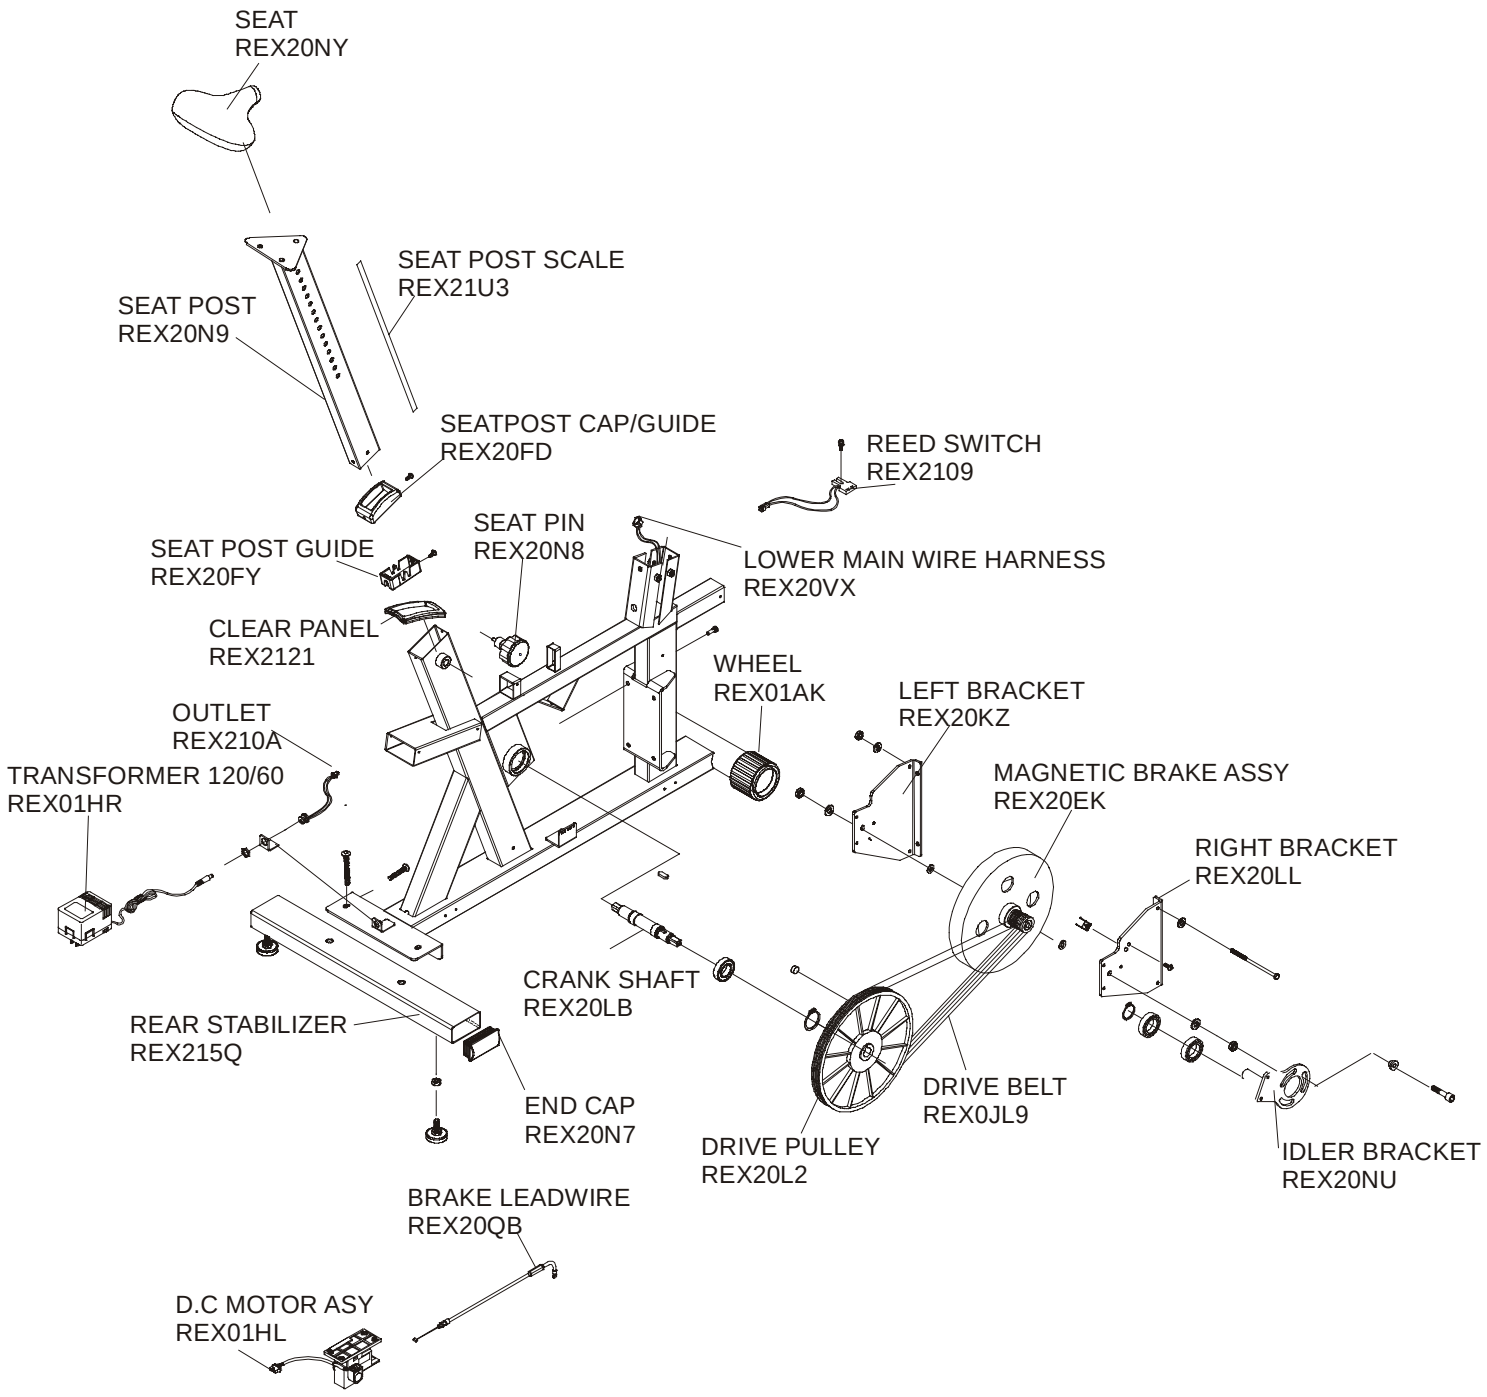

Transformer 120/60.....REX01HR

Transformer 220V UK.....REX22EX

Transformer 220V Continental.....REX22H1

Transformer 240V Aust.....REX01HS

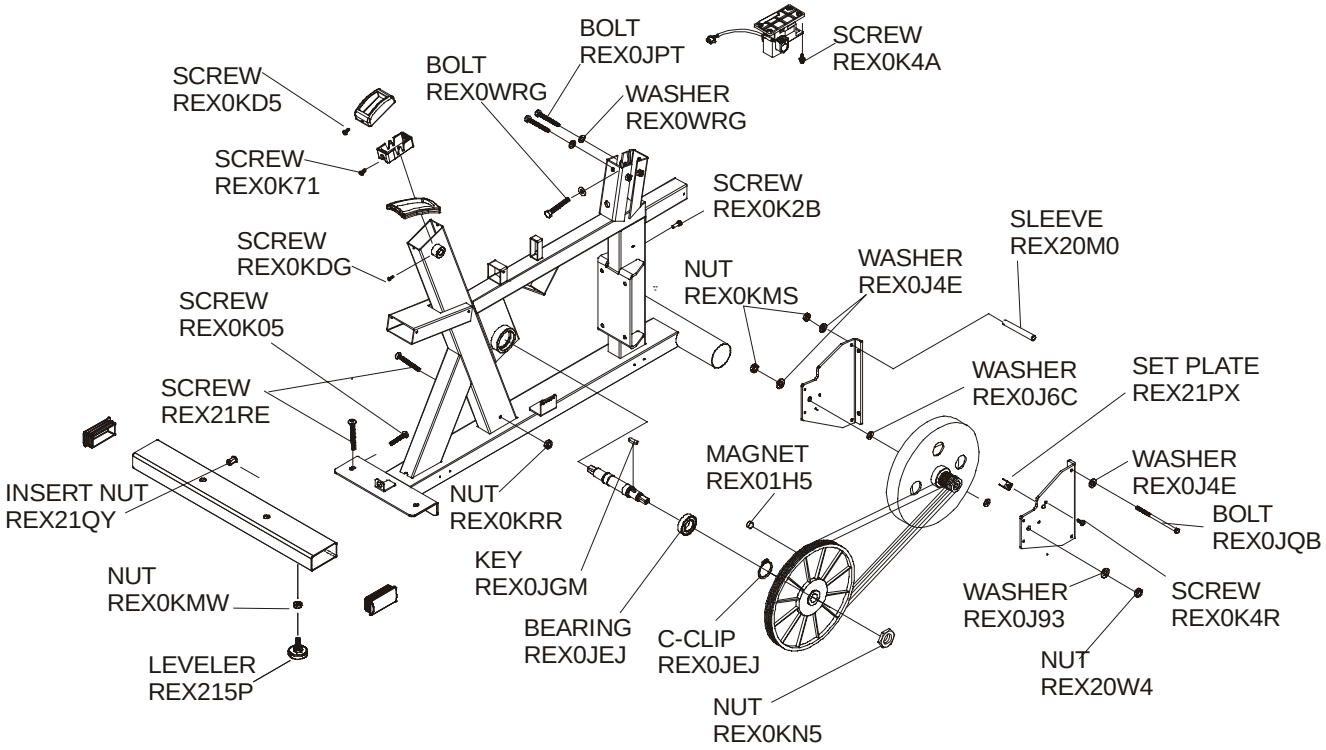
BOLT
REX0JPT
SCREW
REX0K4A
SCREW
REX0KD5
BOLT
REX0WRG
WASHER
REX0WRG
SCREW
REX0K71
SCREW
REX0K2B
SLEEVE
REX20M0
SCREW
REX0KDG
NUT
REX0KMS
WASHER
REX0J4E
SCREW
REX0K05
WASHER
REX0J6C
SET PLATE
REX21PX
SCREW
REX21RE
MAGNET
REX01H5
WASHER
REX0J4E
INSERT NUT
REX21QY
NUT
REX0KRR
BOLT
REX0JQB
KEY
REX0JGM
NUT
REX0KMW
WASHER
REX0J93
SCREW
REX0K4R
BEARING
REX0JEJ
C-CLIP
REX0JEJ
NUT
REX20W4
LEVELER
REX215P
NUT
REX0KN5

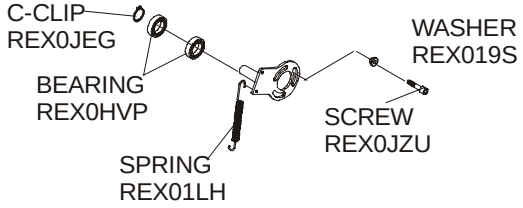
C-CLIP
REX0JEG
WASHER
REX019S
BEARING
REX0HVP
SCREW
REX0JZU
SPRING
REX01LH